

PL1004 – Field Install Guide

Description: Shower assembly using a Shower Elbow and a 5/8” copper insert at the wall.

Parts:



PR3000:
Copper extension 1/2 pipe x 1/2 male thread x 5 inches long copper pipe 12 inch by 1/2 inch diameter



PLM16203
Compression kit:
Brass nut



PLM16203
Compression kit:
Washer



PLM16203
Compression kit:
Ferrule




PLM16203
Compression kit:
Brass retaining collar




PLM16203
Compression kit:
O-ring



PLM10100:
Flow Sensor 2063 PPG
After 9 26 2017

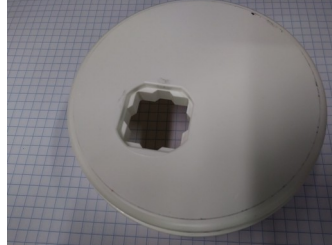


PLM12107:
Escutcheon for meter
white

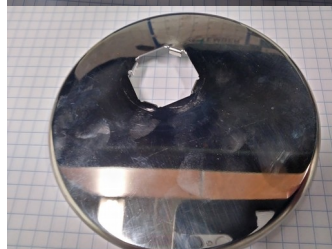

PLM17106:
Chrome bezel for
shower and tub




PLM11100:
Shower elbow

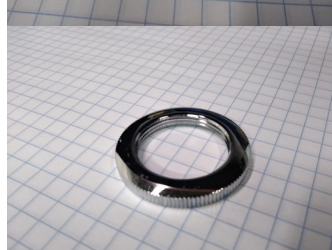

PLM11101:
Shower ring nut

Installation

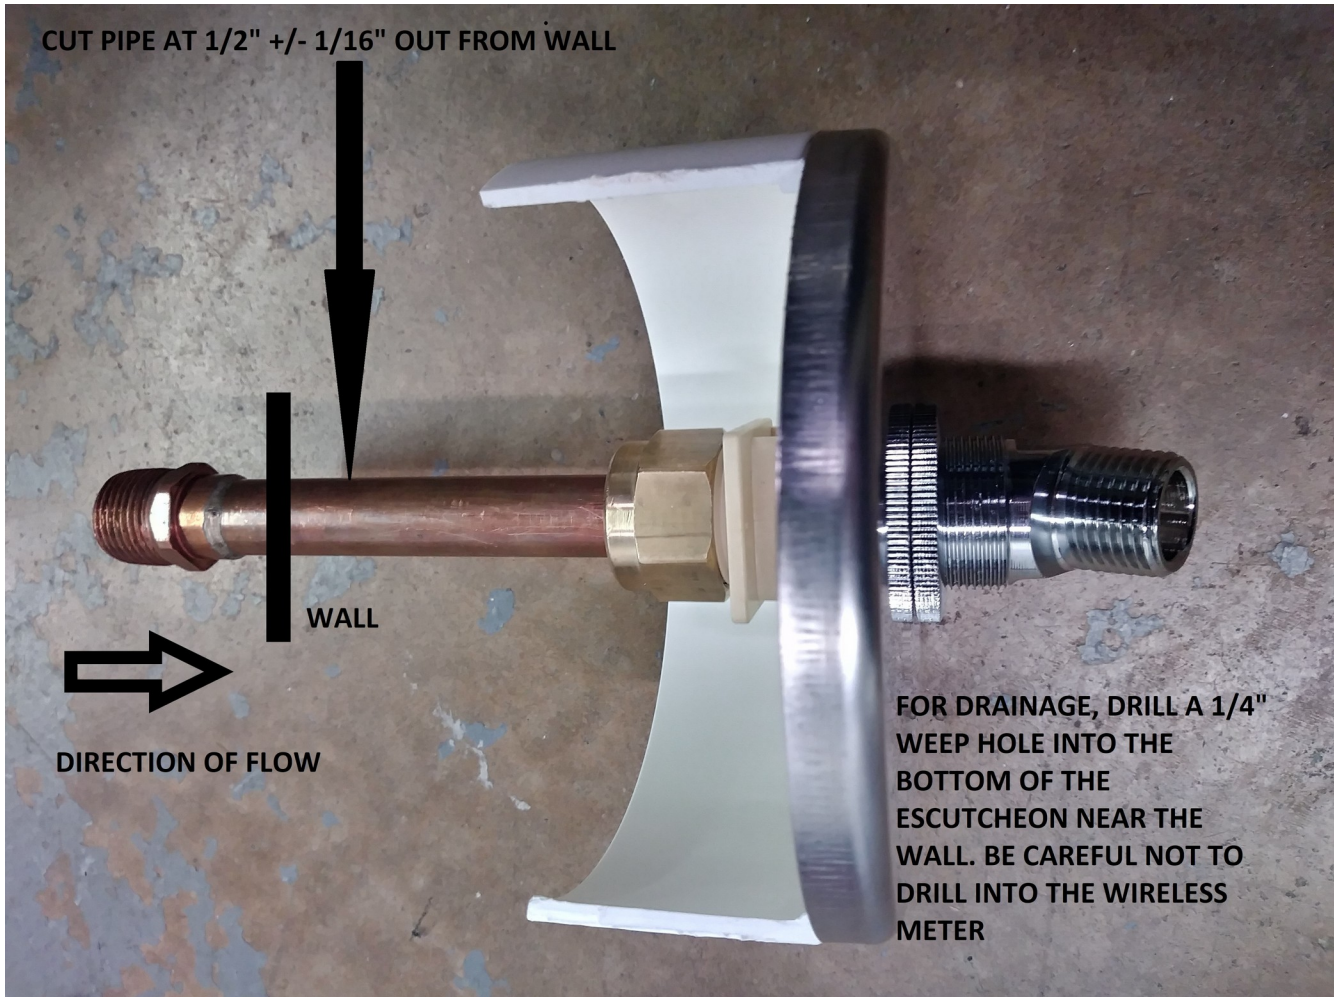

Assembly order for compression fitting (above)



Correct orientation of PLM10100 (above)

Assembly Instructions – field

- (A) Assemble parts 1 thru 7 using thread sealant on all threaded connections
- (B) The copper pipe must be bottomed out into PLM10100 while tightening